



KODAK  
**disc** 3500  
camera



See illustrations inside both covers

Beachten Sie bitte die Abbildungen innerhalb beider Klappseiten

Para consultar las ilustraciones despliegue ambas tapas

Voir illustrations a l'intérieur des pages de couverture

Vedere figure all'interno delle due copertine

De afbeelding vindt u aan de binnenzijde van de omslag

Se bilder på insidan av omslagets fram och baksida

この扉を開いて、図を参照しながら本文をお読みください。

請見封面裡與封底裡之圖片

انظر الصور الإيضاحية داخل كلا الغلافين

English 2  
Deutsch 9  
Español 18  
Français 25  
Italiano 33

Nederlands 41  
Svenska 50  
日本語 57  
中文 65  
عربي 1

## Wrist Strap

Insert the shorter looped end of the wrist strap behind the POST (1,D). Then pass the longer end through the shorter loop and pull the strap tight.

## Loading



- Lift the DISC DOOR LEVER (1,B) until it is fully open (4,A). The DISC COMPARTMENT DOOR (4,B) will pop open. Insert a disc into the camera (Illustration 4). Close the disc compartment door and snap it shut. Then, push the disc door lever back into place.

**Note:** We **do not** recommend that you remove a disc until all 15 exposures have been taken. If you do remove and reinsert a partially used disc, one of the picture frames will be lost. For example, if the EXPOSURE COUNTER (5,B) reads frame 8 and you remove the disc, upon reinsertion the camera will automatically advance to frame 9. Frame 8 will have been skipped.

## Picture-Taking

- Open the lens cover by sliding the BUTTON (1,E) all the way over to the symbol "O". The disc will *automatically* advance to the first frame, and a "1" will be visible in the exposure counter.

1

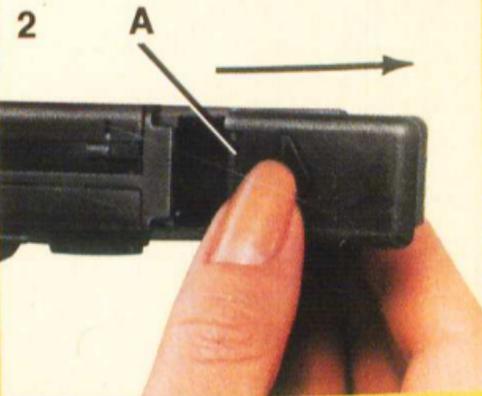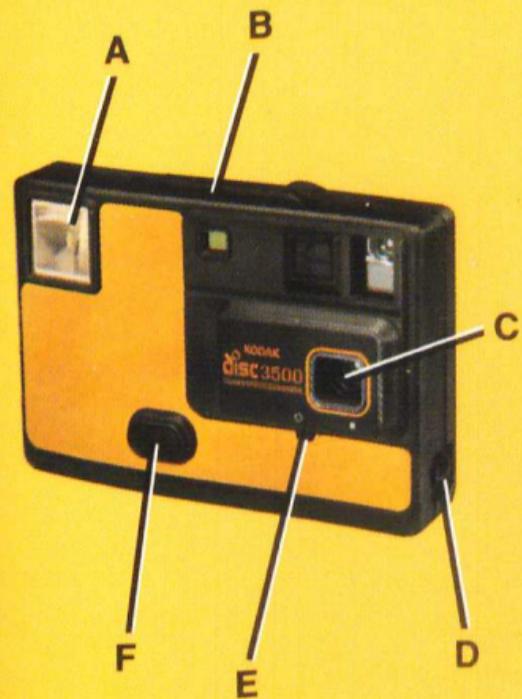

## ENGLISH

Welcome to the new era in photography! With your new KODAK Disc 3500 Camera, taking pictures is as simple as load, aim, and shoot. Your camera uses the new KODACOLOR HR Disc Film, and features automatic disc advance, built-in electronic flash that turns on and off automatically, and a protective lens cover.

Equipment subject to minor appearance changes.

## Battery

Your new disc camera uses one 9 volt alkaline battery.

**Note:** Use alkaline battery only. Be sure the word "alkaline" appears on the battery case.

- To install the battery, slide the BATTERY COMPARTMENT DOOR (2,A) in the direction of the arrow (Illustration 2), lift it off, and fold it back. Insert the battery into the battery compartment with the "+" terminal (the larger of the two) toward the outside of the camera (Illustration 3). To close the battery compartment door, place it over the battery compartment, press it down to compress the spring, and slide the door back into place.

2

## Wrist Strap

Insert the shorter looped end of the wrist strap behind the POST (1,D). Then pass the longer end through the shorter loop and pull the strap tight.

## Loading

- Lift the DISC DOOR LEVER (1,B) until it is fully open (4,A). The DISC COMPARTMENT DOOR (4,B) will pop open. Insert a disc into the camera (Illustration 4). Close the disc compartment door and snap it shut. Then, push the disc door lever back into place.

**Note:** We do not recommend that you remove a disc until all 15 exposures have been taken. If you do remove and reinsert a partially used disc, one of the picture frames will be lost. For example, if the EXPOSURE COUNTER (5,B) reads frame 8 and you remove the disc, upon reinsertion the camera will automatically advance to frame 9. Frame 8 will have been skipped.

## Picture-Taking

- Open the lens cover by sliding the BUTTON (1,E) all the way over to the symbol "O". The disc will *automatically* advance to the first frame, and a "1" will be visible in the exposure counter.

3