



Kodak tips for better disc photos



Good ideas mean good photos

Use your imagination, be creative, and think color — these are just a few ideas to get you started on the road to successful disc photography.

We've also provided a few typical "ideas" below, so now it's up to your own flair and personal style to produce pleasing photos for you and your friends to share.

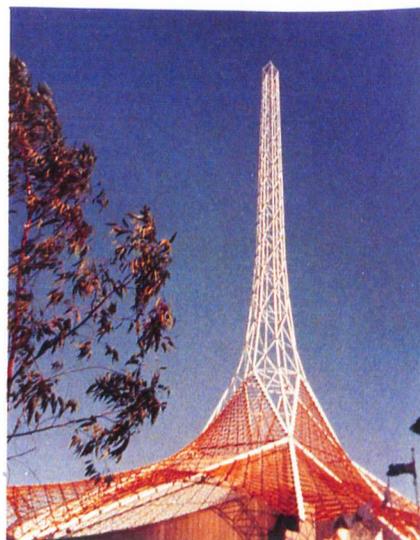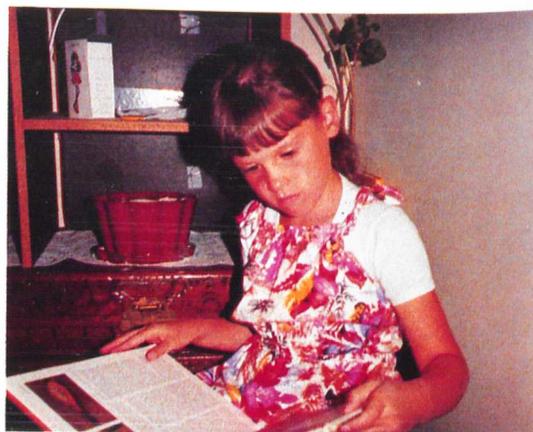


Load your camera correctly

Disc film has a "dark slide" which covers the film exposure window. However, incorrect loading can leave this cover open, and your film can be fogged by light.

To avoid disappointment, follow these simple rules (they are also detailed in your camera instruction book).

- 1 Lift latch lever (A) to fully upright position.
- 2 Insert disc into camera.

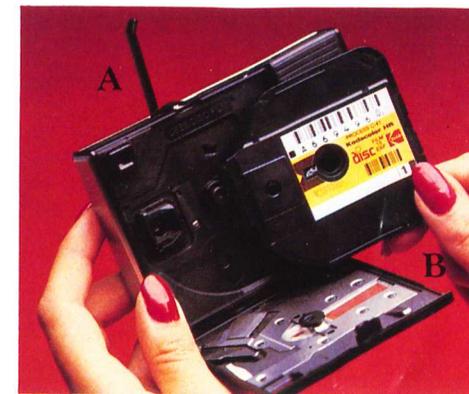

Here's what your disc pictures will look like if a dark slide is inadvertently left open.

Leaving the dark slide open in any position means you won't get all photos.

- 3 Close and hold disc door (B) until it clicks shut.
- 4 While holding door shut, push door lever (A) into place.



Loss of a picture, either partially or completely, can be overcome through correct loading — if this problem persists, however, your camera may need to be checked under warranty.

What can you expect from Kodak disc products?

Our pocket-size lightweight cameras are easy-to-load and unload, and you can expect sharp pictures without focussing from all models, as they all have quality glass lenses, built-in electronic flash, motor drive and

a long warranty (up to 5 years depending on the model you purchase). Specific points are also summarized in this handy reference table:

Summary Chart

	2000	3500	4000	6000	8000
Focus-free lens, $f/2.8$, 4 element, all glass, 1.2 metre (4') to infinity	■	■	■	■	■
Motorised film advance	■	■	■	■	■
Built-in flash	■	■	■	■	■
Flash auto-on, auto-off		■	■	■	■
Flash manual on/off	■				
Flash range 1.2 to 5.5 metre (4-18')	■	■	■	■	■
Flash recycle-approximately 1 second	■	■	■	■	■
Ultralife energy source			■	■	■
Full 5-Year Warranty				■	■
Automatic exposure control		■	■	■	■
Metal carry strap			■	■	■
Sliding lens cover	■	■	■		
Full protective cover/handle				■	■
Viewfinder-close-up indicator and parallax correction				■	■
Close-up setting (45cm to 1.2 metre) (18" to 4')				■	■
Digital alarm clock in cover — separate energy source, push-button light					■
Self-timer-flashing LED indicator and audio beeper					■
Continuous rapid sequence					■

More information:

Each Kodak disc camera, when sold, includes an instruction book for you to use — if you need some advice, this is the best source available to you at all times, and its easy-to-use style will help solve most of your requirements.



If you would like additional information, simply contact your nearest Kodak location, or write to:
 Photo Information Services,
 Kodak (Australasia) Pty. Ltd.,
 P.O. Box 90,
 Coburg, Vic., 3058.

Kodak tips for better disc photos
 Kodak leaflet AA-411 (Aust.)
 New publication 7-83EX
 Photo Information Services
 KODAK (Australasia) PTY. LTD.,
 Incorporated in Victoria.
 KODAK is a trademark
 Copyright Kodak (Australasia) Pty. Ltd. 1983

